

Clemas & Co Ltd

Industrial Cleaning Equipment
Sales - Hire - Service

FOX VACUUM OPERATOR MANUAL



Clemas & Co. Unit 5 Ashchurch Business Centre, Alexandra Way, Tewkesbury,
Gloucestershire, GL20 8NB.

Tel: 01684 850777

Fax: 01684 850707

Email: info@clemas.co.uk

Web: www.clemas.co.uk



WEEE - Waste of Electric and Electronic Equipment



English

The symbol on the product or on its packing indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Deutsch

Das Symbol auf dem Produkt bzw. auf der Produktverpackung deutet an, dass das Produkt nicht mit dem Haushaltsmüll entsorgt werden darf. Stattdessen ist es zur Entsorgung an eine geeignete Sammelstelle für das Recycling von elektrischen und elektronischen Geräten zu bringen. Durch die korrekte Entsorgung helfen Sie mit, potenziellen negativen Einflüssen auf die Umwelt und die Gesundheit vorzubeugen, die durch eine unangemessene Entsorgung dieses Produkts entstehen könnten. Genauere Informationen zur Wiederverwertung dieses Produkts erhalten Sie von Ihrer Stadtverwaltung, der Müllabfuhr vor Ort oder dem Geschäft, in dem Sie dieses Produkt erworben haben.

Français

Le symbole sur le produit ou sur son emballage indique que ce produit ne doit pas être traité comme un déchet ménager. Il doit au contraire être remis au point de collecte correspondant pour le recyclage du matériel électrique et électronique. En procédant de cette manière, vous aiderez à prévenir les conséquences potentiellement négatives pour l'environnement et la santé humaine que pourrait causer un traitement inadéquat du rejet de ce produit. Pour plus ample information sur le recyclage de ce produit, veuillez prendre contact avec

votre bureau municipal, votre service de collecte de déchets ménagers ou le magasin où vous avez acheté le produit.

Português

Símbolo no produto ou na embalagem indica que esse produto não deve ser tratado como um resíduo doméstico. Ao contrário, deve ser levado ao local de recolha adequado para a reciclagem de equipamentos electroelectrónicos. Ao se assegurar que o tratamento deste equipamento foi adequado, estará a ajudar a prevenir consequências potenciais ao meio ambiente e à saúde humana que poderiam ser causadas pelo manejo inapropriado do produto. Para mais informações sobre a reciclagem deste produto, entre em contacto com as autoridades locais, com o órgão responsável pela recolha de lixo ou a loja onde o produto foi adquirido.

Italiano

Il simbolo sul prodotto o sulla confezione indica che questo prodotto non può essere smaltito fra i rifiuti domestici. Deve invece essere consegnato a un centro di raccolta autorizzato per il riciclaggio dei dispositivi elettrici ed elettronici. Smaltendo questo prodotto in modo corretto, si contribuisce a ridurre l'impatto ambientale e sull'uomo. Per maggiori informazioni sul riciclaggio di questo prodotto, contattare il proprio comune, il centro di raccolta dei rifiuti urbani locale o il rivenditore.

Nederlands

Het symbool op het product of de verpakking geeft aan dat dit product niet als huishoudelijk afval mag worden behandeld. Het apparaat moet bij een verzamelpunt voor het recyclen van elektrische en elektronische apparatuur worden ingeleverd. Door dit product op de juiste manier af te danken, helpt u bij het voorkomen van mogelijke negatieve consequenties voor het milieu en de menselijke gezondheid. Deze zouden kunnen ontstaan als



Thank you for choosing the
FOX vacuum cleaner

Table of content

Chapter	Page
1. Overview	16
2. Safety instructions	17
3. Instructions for use	18
4. Service and maintenance	19
5. Trouble shooting	20
6. Guarantee	20

1. Overview

- 1. Head
- 2. Tank
- 3. Buckle
- 4. Hand tube
- 5. On /off button
- 6. Post-filter
- 7. Power cord
- 8. Hook for power cord
- 9. Holder for hand tube
- 10. Hose
- 11. Pre-filter
- 12. Filter cleaning button
- 13. Handle for tank emptying
- 14. Latch for post-filter

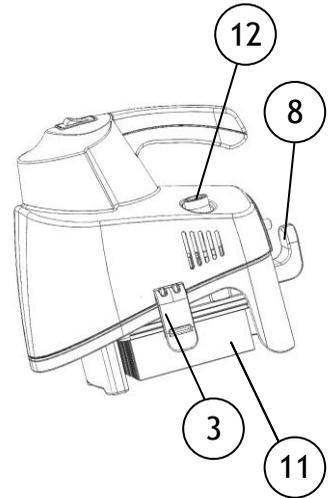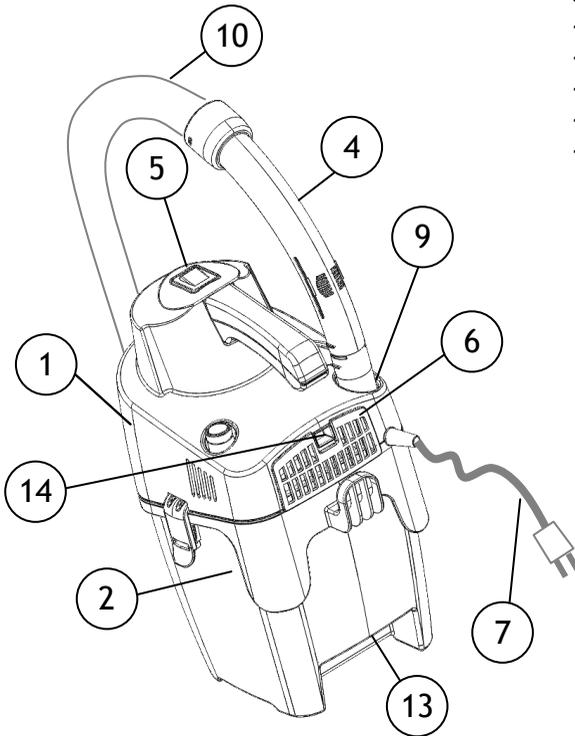

2. Safety Instructions

- Do not use the machine without filters properly fitted.
 - This machine is not intended for the suction of hazardous materials or gas, doing so may expose people to serious health risks.
 - The machine must not be used for the suction of water or other liquids.
 - Do not pick up sharp objects such as needles or pieces of glass.
 - Do not pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.
 - Use and store this machine indoors and in a dry environment, 0°C to 60°C.
 - Do not handle the machine with wet hands.
 - Turn off the machine before unplugging.
 - To unplug, grasp the plug, not by pulling on the cord. Do not carry or pull the machine by the cord.
 - The machine must not be used if the cord shows any sign of damage. Regularly inspect the cord for damage, in particular if it has been crushed, shut in a door or run over.
 - Do not use the machine if it appears faulty. Have the machine inspected by an authorized service centre if the machine has been dropped, damaged, left outdoors or has been exposed to water.
 - No changes or modifications to the mechanical or electrical safety devices shall be made.
 - All repairs must be carried out by an authorized service centre.
 - Use only original filters and original accessories from your local dealer.
- Use of non original filters will void the warranty.
- Turn off the machine and unplug before starting filter change, grasp the plug, not by pulling on the cord.
 - Do not use the machine as a toy.
 - Do not leave children with the machine without supervision.
 - This appliance is not intended for use by young persons or infirm persons without supervision unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
 - Young children should be supervised to ensure that they do not play with the appliance.
 - If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.

3. Instructions for use

Before using the machine make sure that the voltage shown on the rating plate on tank corresponds with the mains voltage.

3.1 Start and stop

Start

1. Pull out the cord (7) and plug the machine to a wall socket.
2. Press the on/off button (5)

Stop

1. Turn off the machine (5) and unplug.
2. Unplug by grasping the plug, not by pulling on the cord.

3.2 Pre-filter Cleaning

The pre-filter (11) needs to be cleaned from time to time with the built in automatic filter cleaning system. The pre-filter (11) needs to be cleaned when the suction performance decreases and consequently motor noise increases.

Pre-filter cleaning

1. Turn the machine on.
2. Make sure that the air intake on the hand tube is closed
3. Put the hand tube (4) into the holder (9) and thereby closing for the air-flow. Motor builds up maximum under pressure in the tank.
4. Push the filter cleaning button (12) 4-5 times.
5. Remove the hand tube (4) from the holder (9)

6. Make sure that the air intake on the hand tube is closed. Suction performance is restored

3.3 Emptying of tank

Observe whether the tank needs to be emptied by opening the buckles (3) and remove the vacuum cleaner head (1).

Emptying of tank

1. Find an appropriate waste bin outside for disposal of the tank
2. Open the buckles (3)
3. Remove the hose (10)
4. Take of the head (1) and put it on the ground on the appropriate feet.
5. Empty the tank (2) into the bin
6. Put the head (1) on the tank (2) and tighten the buckles (3)
7. Clean the post-filter (see next section)

3.4 Post-filter Cleaning


The post filter (6) ensures that very fine dust not removed by the pre-filter (3) is removed.

Post-filter cleaning

1. Move the latch (14) down and take out the filter (6).
2. Clean the post-filter (6) outside by blowing air backwards through it and/or move it rapidly up and down.
3. Insert the post-filter (6) into the head (1). Ensure that it is correctly fitted

3.5 Adjust the suction power

The suction power is maximal with the sliding valve is closed and minimal when all open. Adjust the suction power by putting the sliding valve in the desired position.

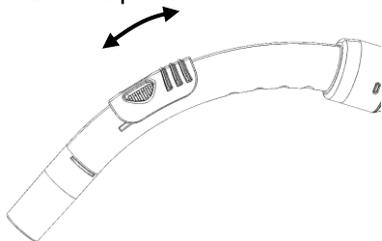

4. Service and maintenance

- Store the machine indoors and in a dry environment.
- Clean the machine surface with a dry cloth or a damp cloth with a little cleaning agent.
- Order original accessories from a local dealer.
- Service - contact your local dealer.

4.1 Recycling and scrapping

Recycle the wrapping and scrap the machine according to recommendations from the local authorities. Cut the cord as short as possible to avoid someone getting injured on the scrapped machine.

4.2 Environmental commitment

This machine is designed with the environment in mind. All plastic parts due marked for recycling.

4.3 Responsibility


Soteco disclaims all responsibility for all damage caused by incorrect use or modification of the machine.

4.4 Filter change


The pre-filter (11) and post-filter (6) can be worn and need to be replaced. For cleaning of post-filter see 3.4

Pre-filter (11) change:

1. Turn off the vacuum cleaner
2. Remove the plug from the wall socket
3. Remove the head from the tank
4. Position the head upside down
5. Remove the 4 screws fixing the filter frame to the head

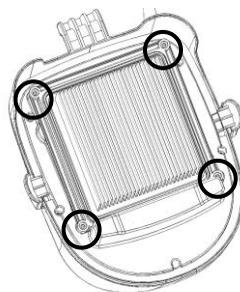

6. Remove the filter
7. Insert the new filter into the filter frame and place it on the head

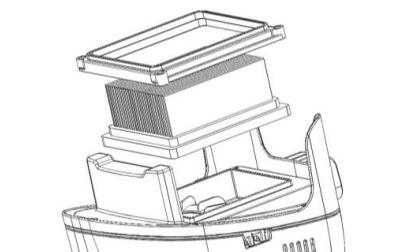

8. Fix the 4 screws. Do not over tighten the screws.
9. Check the filter is properly fixed and the sealing between head and filter frame is secured.

5. Trouble shooting

Repair or service of electrical components such as cord or motor, must only be carried out by an authorized service centre.

If the machine does not start

- Check that the plug is correctly fitted to the wall socket.
- A fuse in the building may have blown and needs to be changed.
- The cord or plug may be damaged and must be repaired by an authorized service centre.

Reduced suction power

- The tank (2) may be full and needs to be emptied, see instructions.
- The pre-filter (11) can be blocked and have to be cleaned, see chapter 3.2
- The bent tube, hose, tube or nozzle may be blocked and needs to be cleaned.

6. Guarantee

This vacuum cleaner is covered by a two (2) year guarantee on the machine, which covers the motor, switch and casing. The nozzles, filters, hoses, tubes and other accessories are covered twelve months due to manufacturing fault only and exclude wear and tear.

The guarantee includes spare parts and labour costs, and covers manufacturing and material defects that may occur during normal domestic use.

Service under the guarantee will only be performed if it can be proven that the defect occurred within the product's guarantee period (a correctly completed guarantee certificate or printed/stamped cash register receipt with date and product type) and on the condition that the vacuum cleaner was bought as a new product.

6.1 Guarantee does not cover

- Normal wear and tear of accessories and filters.
- Defects or damage occurring as a direct or indirect result of incorrect use - such as the vacuuming of rubble, hot ashes or carpet deodorant powder.
- Abuse, loss or lack of maintenance as described in Instructions for use.
- If the machine has been used for suction of water

Nor will it cover incorrect or poor configuration, i.e. setting up or connection, nor fire-damage, fire, lightning strike or unusual voltage

fluctuations or any other electrical disturbances such as defective fuses or defective electrical installations on the supply grid, and defects or damage in general.

6.2 Guarantee becomes void

- If a defect is caused by the use of non-original filters.
- If the identity number is removed from the vacuum cleaner.
- If the vacuum cleaner has been repaired by a non authorized dealer.